




RETRO FIT TRANSITION

- ✓ Allows for a gradual transition between floor finishes
- ✓ Silicone & screw fixing
- ✓ Countersunk holes every 300mm
- ✓ Fast fitting and consistent finish
- ✓ Matt silver finish
- ✓ Overall length 3000mm
- ✓ AS 4586:2013 - Wet Pendulum Certified Rating: P3

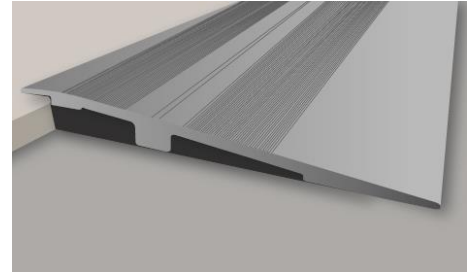

Size A	B	C
5mm	65mm	10mm
9mm	96mm	10mm
13mm	128mm	10mm

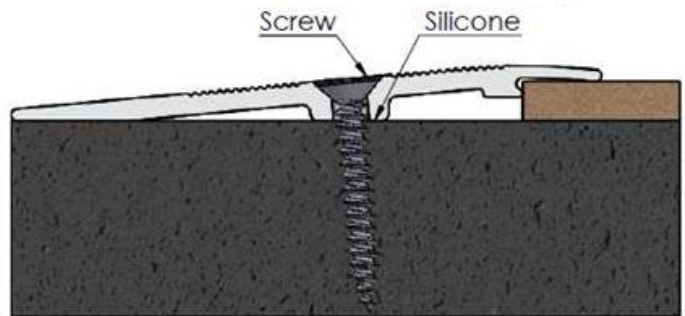

RTR305MS: to suit 5mm to 8mm drop (1 in 8 Gradient at 8mm drop)

RTR309MS: to suit 9mm to 12mm drop (1 in 8 Gradient at 12mm drop)

RTR313MS: to suit 13mm to 16mm drop (1 in 8 Gradient at 16mm drop)

INSTALLATION INSTRUCTIONS:

1. Firmly retain the RTR transition against the installed tiles or sheet as per diagram. Using the pre-drilled holes as a template for drilling locations, drill 7mm holes into the slab to a depth of 33mm.
2. Apply silicone along the base of the RTR transition and secure into place using the supplied plugs and countersunk stainless steel screws.
3. A Bead of silicone can be applied beneath the RTR Transition to ensure that sub-floor irregularities are isolated.